






Morrison's Public Address email: sales@morrisonsav.com

ISO 9001 CERTIFIED

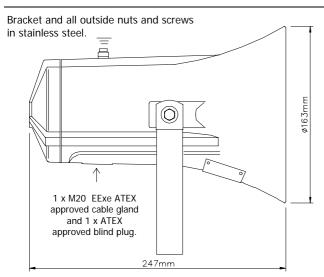

Transformer: 100 V line (optional 70V, 50V)

From speaker: White to black

Primary nominal tappings:

15,0 W 1:3 10.0 W 1:4 7,5 W

From speaker: White to white Primary nominal tappings:

4,0 W 1:2 2,6 W 1:3

2,0 W 1:4

1 = Red, 2 = Yellow

IIB

HC

3 = Green, 4 = Blue

Certified by / Certification code / Number: Certified by / Certification code / Number:

NEMKO / EEx de IIB+H₂ T5 / 98 ATEX 201 NEMKO / EEx de IIC T5 / 98 ATEX 201





| SPL rated power | 101 dB 113 dB 420-7000 105° / 35° |
|-----------------|--|
|-----------------|--|

Installation, Operation and Maintenance Procedures

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received. Fasten the bracket with 1-3 screws and ensure to use all washers in the intended position. (To isolate the main body from the bracket)
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Use only certified/specified cable glands and blanking plugs.
- Do <u>not</u> open loudspeaker when energized.
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- Fasten lid with a torque of 2 3 Nm to assure the IP rating.
- If the Ex-loudspeaker is to be earthed, it must be done correctly using the specially marked screws.
- This loudspeaker is supplied with a 2 year warranty against defective materials and workmanship.

(HS-15 EExmN(T) 60°C must be used with certified cable gland for temperatures up to 90°C)



DNH reserves the right to alter specifications without notice.

Rev. 02.02.2007