


APPLICATION TIPS: OFF-AIR CALL RECORDING

This diagram shows the basic mixer setup using the Aux bus to record an interview with a telephone caller off-air, whilst playing music through stereo channel ST1. The interview could be recorded from the Aux out or via the USB port as shown here.

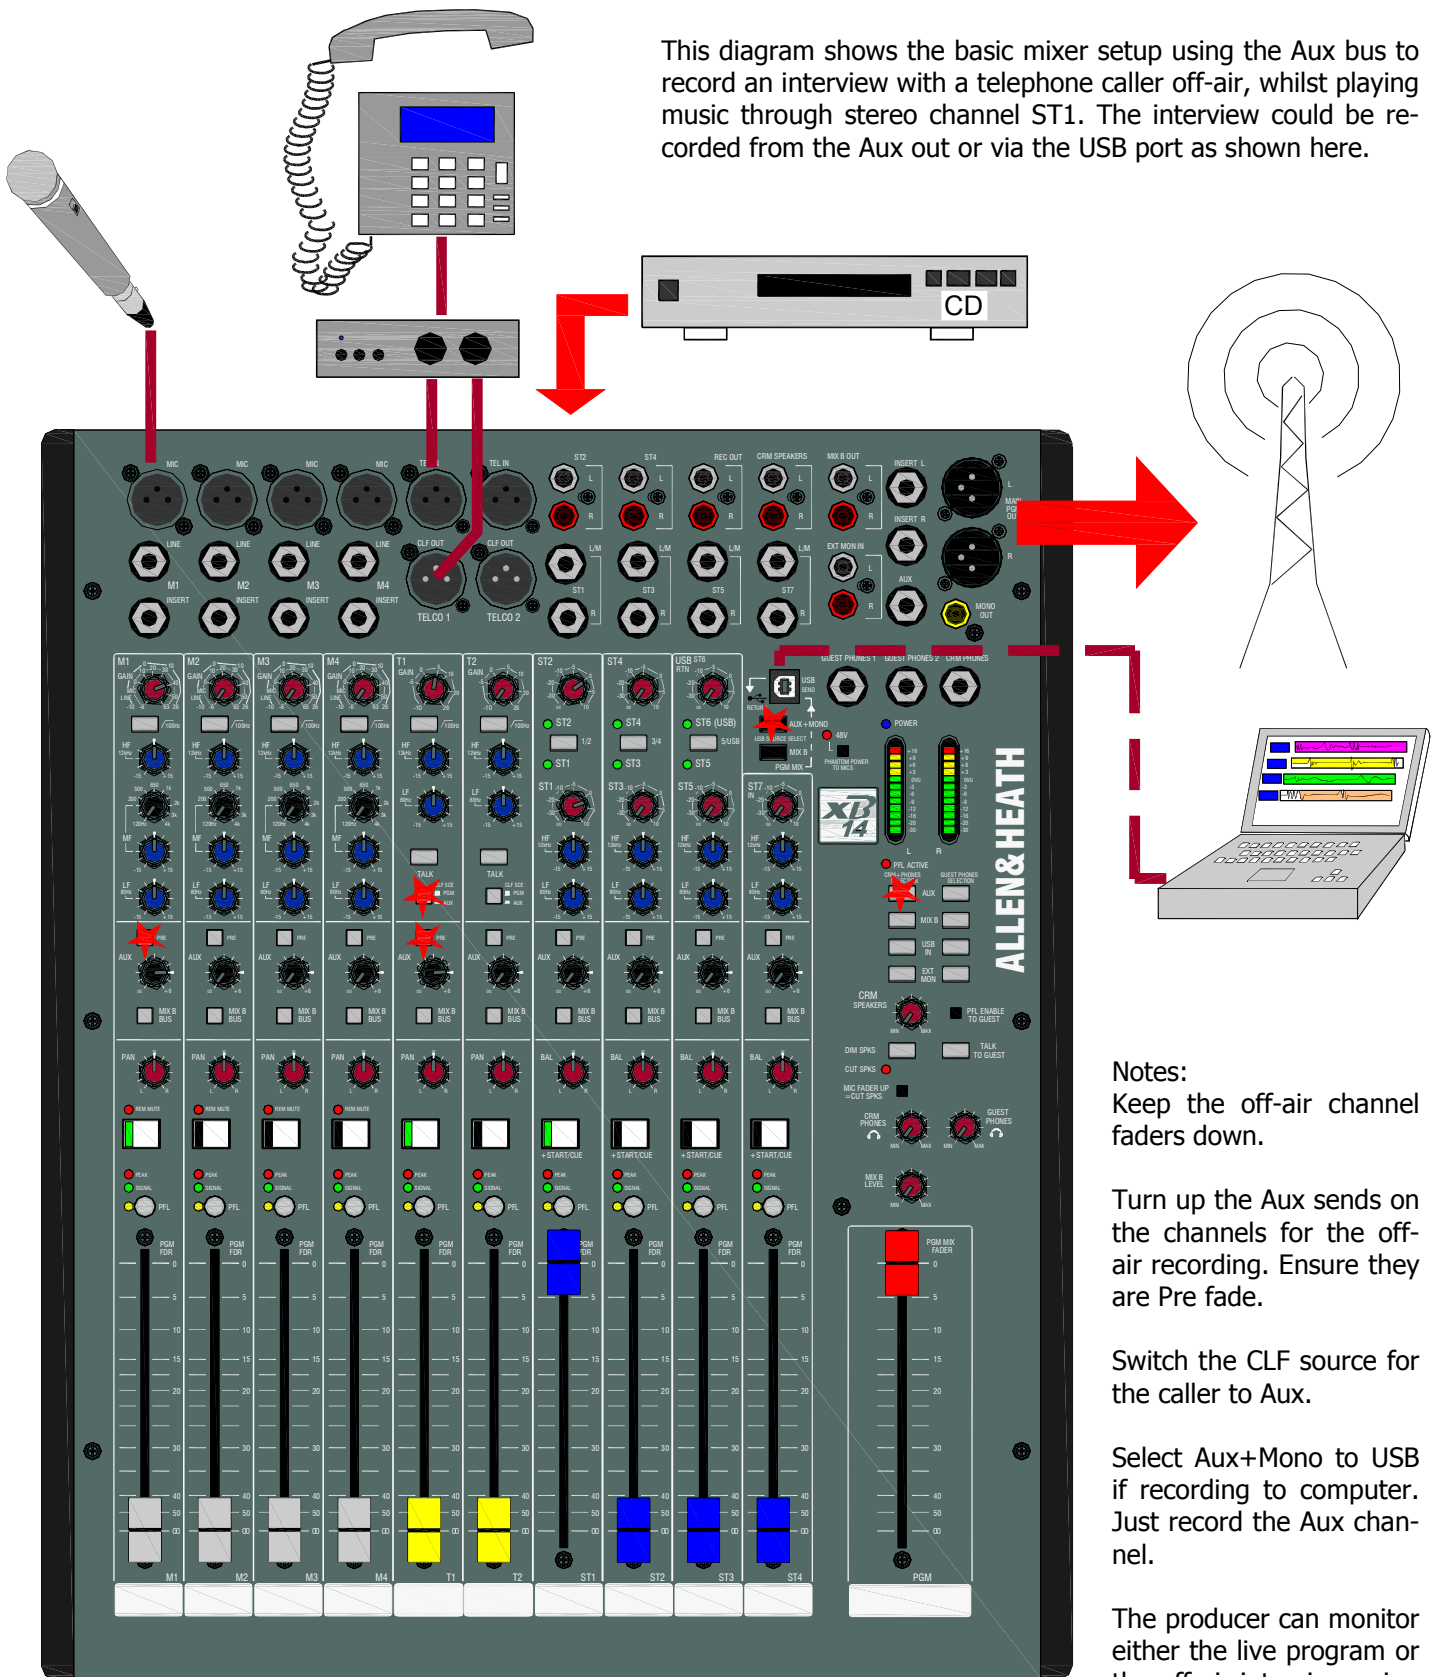

Notes:
Keep the off-air channel faders down.

Turn up the Aux sends on the channels for the off-air recording. Ensure they are Pre fade.

Switch the CLF source for the caller to Aux.

Select Aux+Mono to USB if recording to computer. Just record the Aux channel.

The producer can monitor either the live program or the off-air interview using the CRM selection switches.